INDICE

AVVERTIMENTI/ATTENZIONE 0

DESCRIZIONE DEI COMPONENTI/FUNZIONI..... 1

ISTRUZIONI D'USO..... 2

DRENAGGIO CONTINUO..... 3

AVVERTIMENTI..... 4

MANUTENZIONE/EMERGENZA..... 5

SPECIFICHE..... 6

CONTENTS

WARNING / CAUTION 0

DESCRIPTION OF COMPONENTS / FUNCTION EXPLANATION..... 1

OPERATION INSTRUCTIONS 2

CONTINUOUS DRAINAGE 3

CAUTIONS 4

MAINTENANCE/EMERGENCY 5

SPECIFICATIONS..... 6

WHEELS INSTALLATION (only for ECODRYPRO 30)

Wheels installation is recommended to avoid damage to floors .

1. Remove the wheels from the bucket of the dehumidifier .
2. Position the dehumidifier on its side .
3. Locate the arrow on the bottom of the dehumidifier and insert the wheel according to the arrow direction .
4. Slide the wheel in as far as it will go. The wheel will snap into place.
5. Repeat steps 1 to 4 for the other 3 wheels.

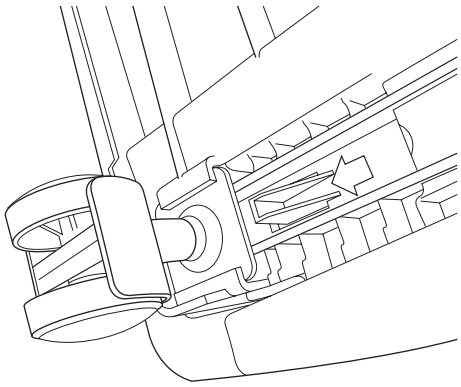

WARNING

- Do not fold the power cord as shown below

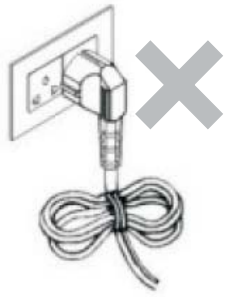

- Make sure the plug is placed fully & firm into the socket

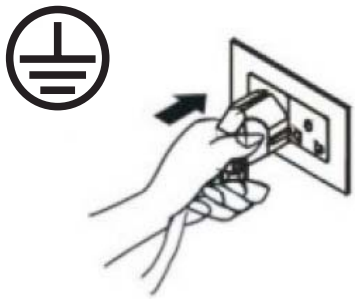

- Do not use multiple socket as shown below

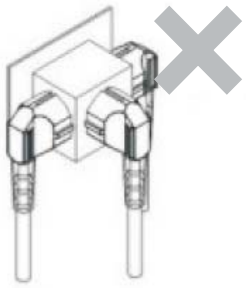

- Make sure the plug is clean

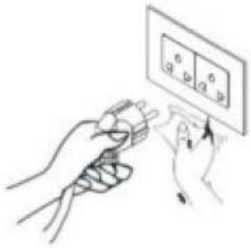

- After turning the unit off, please take plug out of the socket.

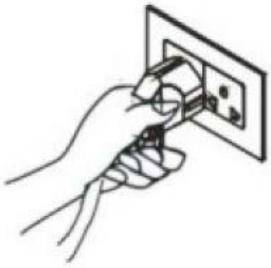

- Do not have wet hands when connecting the power plug.

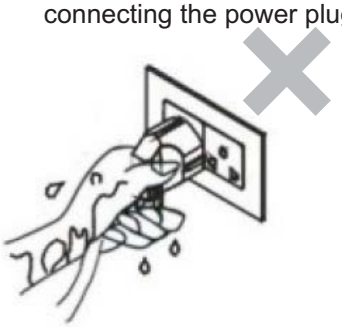

CAUTION

- Do not place anything on top of the control panel

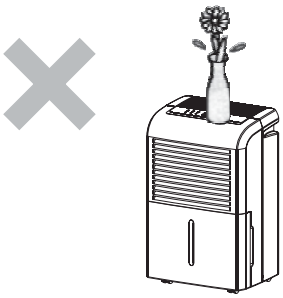

- Do not place anything over the inlet or outlet points.

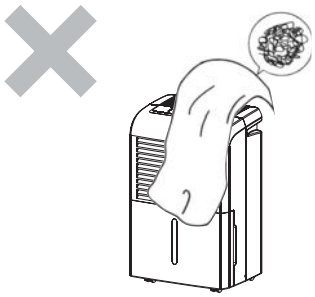

- Do not let children by play with the unit or control

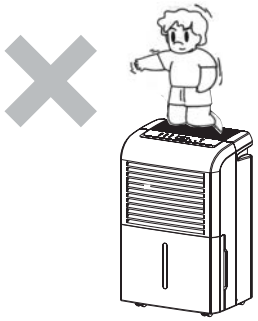

- Do not wet the machine or the control panel

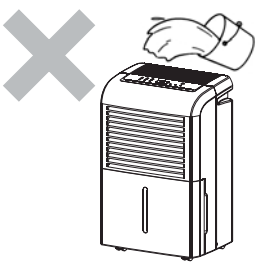

- Keep the flammable gas/oil away from the machine

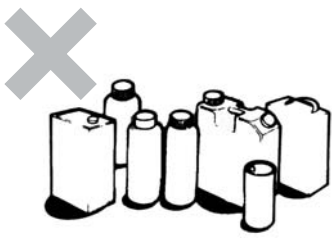

- Ask professionals to do the servicing

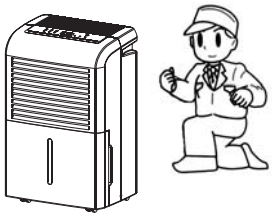

DESCRIPTION OF COMPONENTS

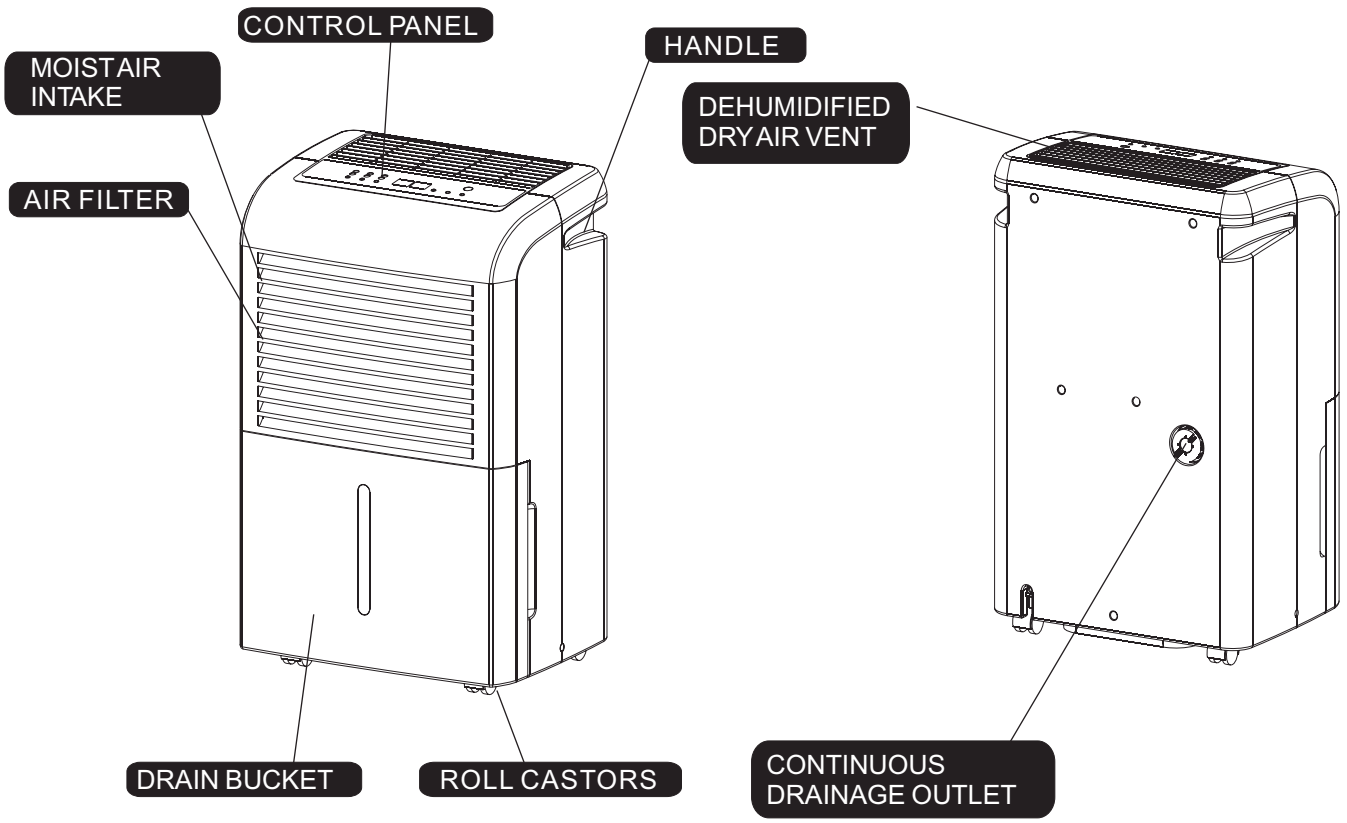

FUNCTION EXPLANATION

BUCKET FULL LAMP

Water tank is full,and lamp lights.

DEFROST LAMP

When low temperature, unit gets into defrosting mode and lamp lights.

CURRENT TEMP / TIMER SET DISPLAY

When machine is running, it displays the current temperature. Press the "Timer" button to set the machine to shut off automatically after a specified amount of time. 10 seconds after displaying the timer, the display will change back to current temperature.

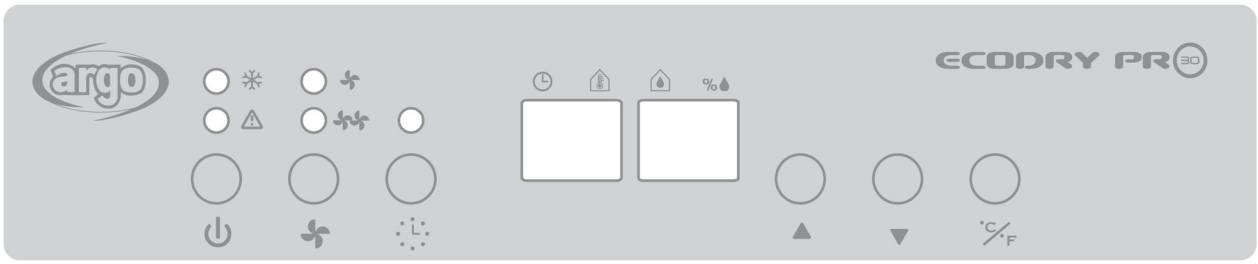

POWER

On / Off

FAN SPEED

High / Low

TIMERS

When unit operates, press "TIMER" set hours unit will off after set hours.
When unit stand-by, press "TIMER" set hours unit will on after set hours.
Setting timer from 1~24 hours.
To cancel the timer, proceed as above but set the "timer off" to zero hours.

SET HUMIDITY / CURRENT HUMIDITY DISPLAY

When machine is running, it displays the current humidity. Press "▲" or "▼" to select humidity setting. The humidity is adjusted in an increment of 5% by each pressing of "▲" or "▼". Adjustable range is within 30%RH to 90%RH. 10seconds after setting humidity, the display will change back to the current humidity.

Press the ℃/℉ switch buttons, it will switch at sequence of ℃ and ℉.

OPERATING INSTRUCTIONS

● Start Operation

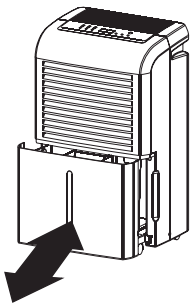

1) Place the product in an upright position on a flat, steady, stable, heat-resistant surface. Make sure there is nothing flammable or heat sensitive within 100 cm (39 inches). Operating the product in any other position could cause a hazard.
2) Insert the plug into a suitable wall socket. The dehumidifier is suitable for operation on an electricity supply having the same voltage as that shown on its rating label.
3) Make sure the water tank is correctly located. (After switching on the machine for the first time, if the ″Bucket Full″ lamp illuminates, just pull out the water tank, check the ″float″ lever is able to move freely, then return the water tank to the correct position.)

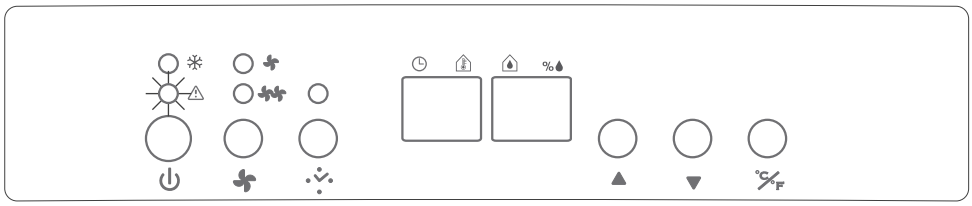

● When Bucket Full Lamp Is On

When the water tank is full the machine will stop and the ″Bucket Full″ light will illuminate. The water tank should be carefully removed from the machine by sliding it outwards from the front of the machine and it should be emptied. When the empty tank is replaced properly into the machine, the machine will start up and run normally.

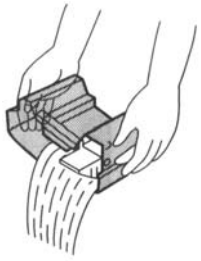

Please use both hands to carefully empty the water tank.

● DEFROST

When the machine is operated at low temperatures (less than 12℃) the surface of the evaporator may accumulate a layer of frost which would reduce the efficiency of the machine. When this happens the machine will go into periodic defrost mode.

CONTINUOUS DRAINGE

The function of continuous drainage can be started in following steps when there is a good condition of drainage near by the unit.

1. To save having to periodically empty the water tank, this unit can be configured for continuous drainage. You can use the supplied drain hose to connect to the continuous drainage connector.	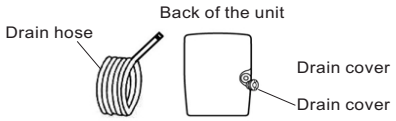
2. Unscrew and remove the drain cover at the rear of the unit. 3. Remove the soft rubber stopper. Put it into the water tank for safe keeping.	
4. Insert the drain hose through the hole of the drain cover.	
5. Connect the drain hose to the drain port.	
6. Tighten the drain cover in clockwise direction onto the rear of the unit.	
7. Place the bucket on its original location.	

INSTALLING DRAINAGE PVC HOSE

When using the function of continuous drainage, the PVC hose must be placed horizontally below the drainage hole. Must avoid uneven ground and folding the hose.

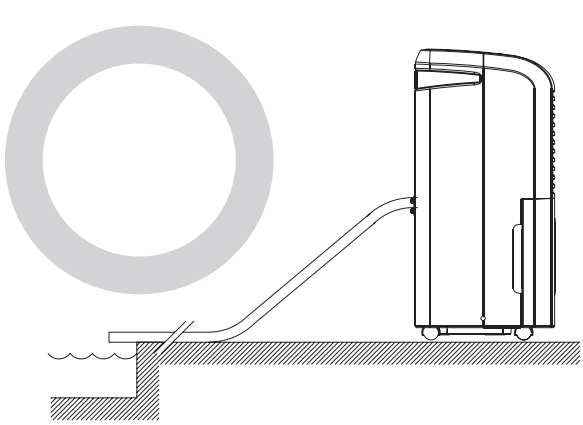

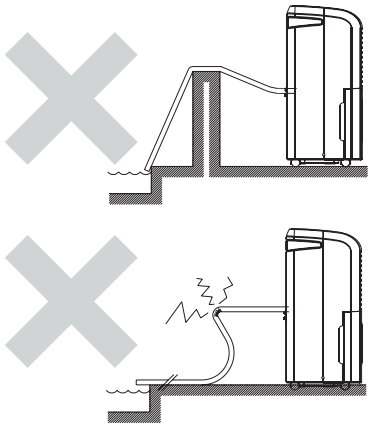

CAUTIONS

● Do not pull the power cord to avoid broken cord, which lead to danger.

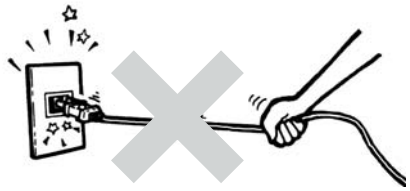

● Do not use insect, oil or paint spray around the machine, it might cause damage to the plastic parts or start a fire.

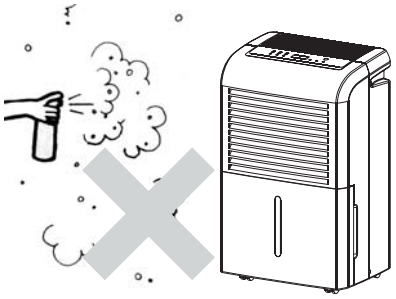

● Do not place the machine on an uneven ground, to avoid shaking, noise and leakage of water.

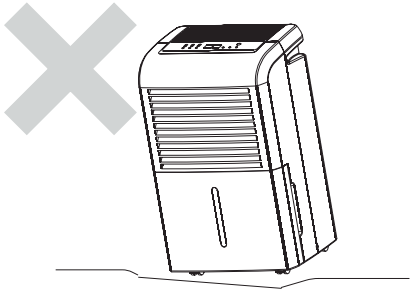

● Please always keep the unit 20 cm away from the wall to dissipate the heat properly.

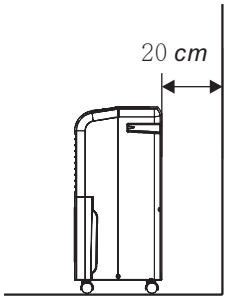

● It is dangerous to put anything into the machine.

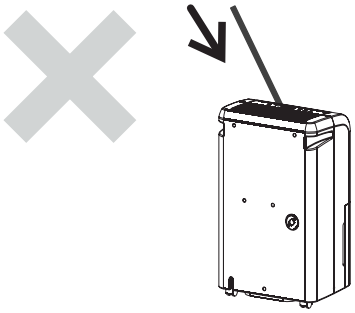

● Close all the open windows to reach the maximum possible efficiency of removing moisture.

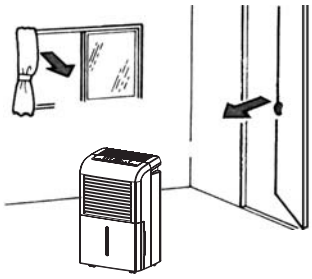

● Keep the machine away from any type of heat sources.

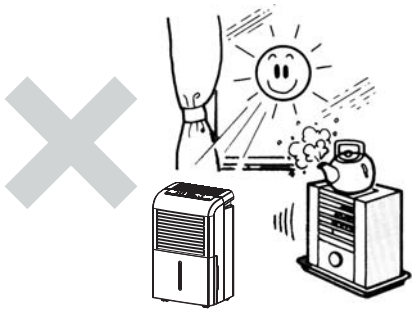

● When moving or put in storage, do not place the dehumidifier on side way or upside down and avoid violent shaking.

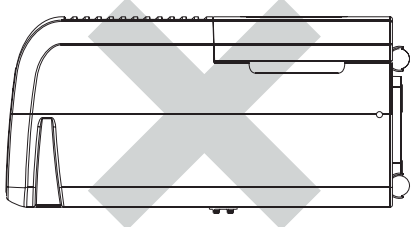

MAINTENANCE

For safety reasons, make sure the dehumidifier is unplugged before serving or cleaning the machine.

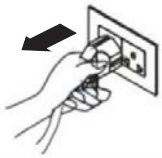

1) Cleaning the shell：

A. Wipe the shell with a clean, soft cloth.

B. If the dehumidifier is very dirty, use mild detergent then wipe off the detergent with half dried cloth.

C. Do not wash the machine with a hose or immerse it in water. The may cause leakage of electricity.

2) Cleaning the air filter：

The propose of the air filter is to filter dust and other materials from the air. If the filter is blocked by dust the electricity usage will be greater than normal, For optimal moisture removal efficiency, clean the filter every two weeks.

● Cleaning Steps：

A. Pull the air filter out gently.

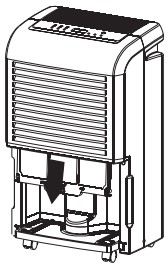

B. Clean the filter with a vacuum cleaner or wash it with clean water and dry with a dry cloth.

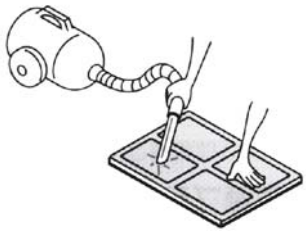

C. Put the clean air filter back in place and continue to operate the dehumidifier.

EMERGENCY

If a problem occurs, unplug the machine and contact a qualified serving center immediately. Do not disassemble the dehumidifier yourself

SPECIFICATIONS

MODEL	ECODRYPRO 30	ECODRYPRO 50
POWER SUPPLY	220-240V / 50 Hz	
MOISTURE REMOVAL	15 L/24h (27° C - 60%RH) 30 L/24h (30°C - 80% RH)	25 L/24h (27°C - 60% RH) 50 L/24h (30° C - 80% RH)
POWER INPUR	520 W	740 W
DIMENSIONS (Height./Width./Depth.)	540x340x252	600x388x282
WEIGHT	13.2 kg	19.5 kg
OPERATING LIMITS	5°C ~ 35°C	

F-GAS REGULATION (EC) no. 842/2006
Do not vent R410A into atmosphere: R410A is a fluorinated greenhouse gas, covered by Kyoto Protocol, with a Global Warming Potential (GWP) = 1975.

- Do not use the appliance if the cord or plug are damaged. If the power supply cord is damaged, it must be replaced by the manufacturer, dealer or a similarly qualified person so as to avoid any safety risks.
- This product is not a toy. Children should be adequately supervised to ensure that they do not play with the appliance.
- This appliance is not suitable for use by persons (including children) with reduced physical, sensory or mental abilities, or without the necessary experience and knowledge, unless they have been adequately supervised and instructed concerning use of the appliance by a person responsible for their safety.

INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH THE EUROPEAN DIRECTIVE 2002/96/EC

At the end of its working life this equipment must not be disposed of as an household waste. It must be taken to special local community waste collection centres or to a dealer providing this service. Disposing of electrical and electronic equipment separately avoids possible negative effects on the environment and human health deriving from an inappropriate disposal and enables its components to be recovered and recycled to obtain significant savings in energy and resources. In order to underline the duty to dispose of this equipment separately, the product is marked with a crossed-out dustbin.

argo
improve your life

www.argoclima.com

MADE IN CHINA